

PART NAME - NUMBER SHACKLE ASSEMBLY - 122456-1



KIT INFORMATION



PRODUCT LINE SuperSprings

VARIATION Shackle-Kit

TOOLS REQUIRED


BEFORE YOU BEGIN

PLEASE NOTE

> Neoprene gloves


To protect against any shards of metal from the components, all of the following steps of this guide require you to wear neoprene gloves to complete.


BILL OF MATERIALS

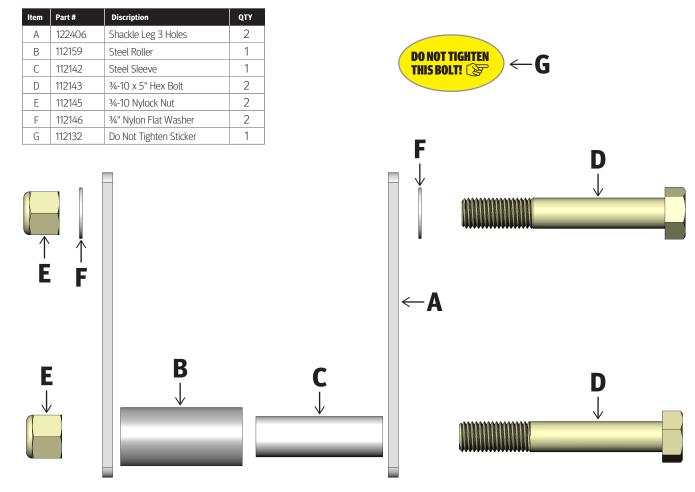



ASSEMBLY INSTRUCTIONS

- 1. Locate and review components needed to build the shackle assembly as listed in the Bill of Materials section.
- 2. Lay the part B Steel Roller upright on the table. Insert the part C Steel Sleeve into the Steel Roller (DIAGRAM A).

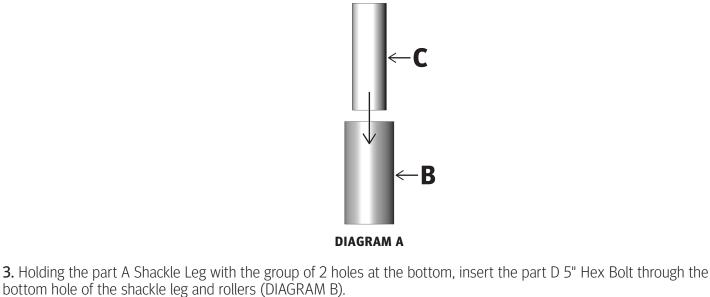

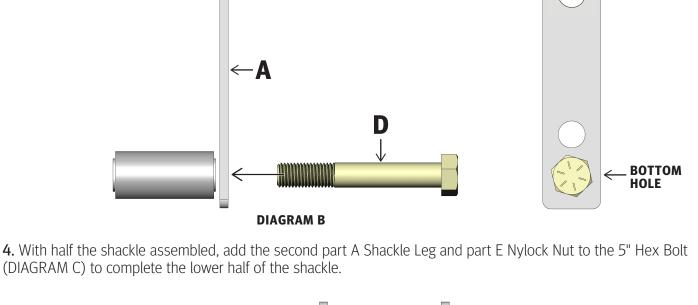

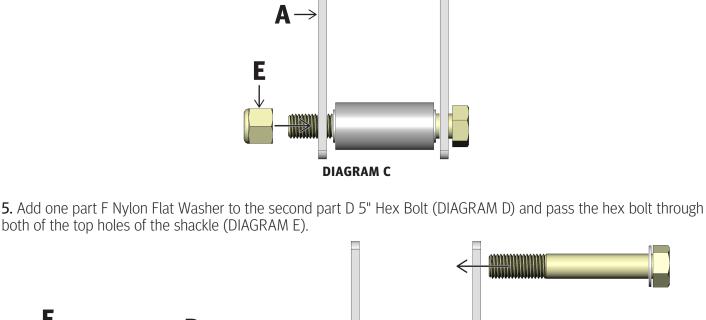

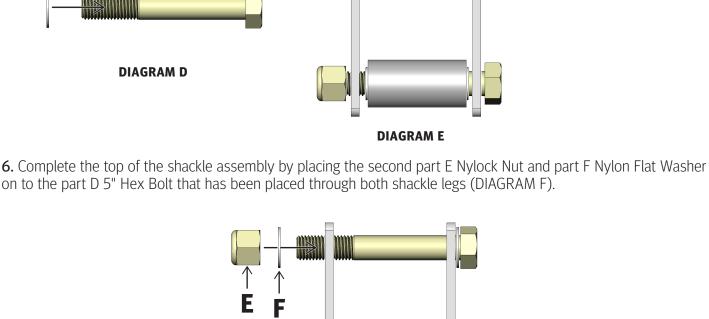

7. Finish the completed shackle by placing a part G Do Not Tighten Sticker at the top of the leg of the shackle next

to the head of bolt part D (DIAGRAM G). The finger on the sticker should be pointing at the top part D bolt.



DIAGRAM F

enter the shackle assembly into the system.

8. Using the scanner (refer to scanner instructions)

9. Place the assembled shackle in the applicable bin.

COMPLETED ASSEMBLY