

PART NUMBER

SFR-102-40/47/54



SCAN HERE: To tell us about your installation




BEFORE YOU BEGIN

PRIMARY APPLICATIONS

> Builder Kits for Custom Applications

PARTS LIST

Item	Part #	Description	QTY
A	511456	SumoSprings Blue -40	2
	511457	SumoSprings Black -47	
	511458	SumoSprings Yellow -54	
B	512313	4" Steel Washer	2
C	512117	1" Spacer	2

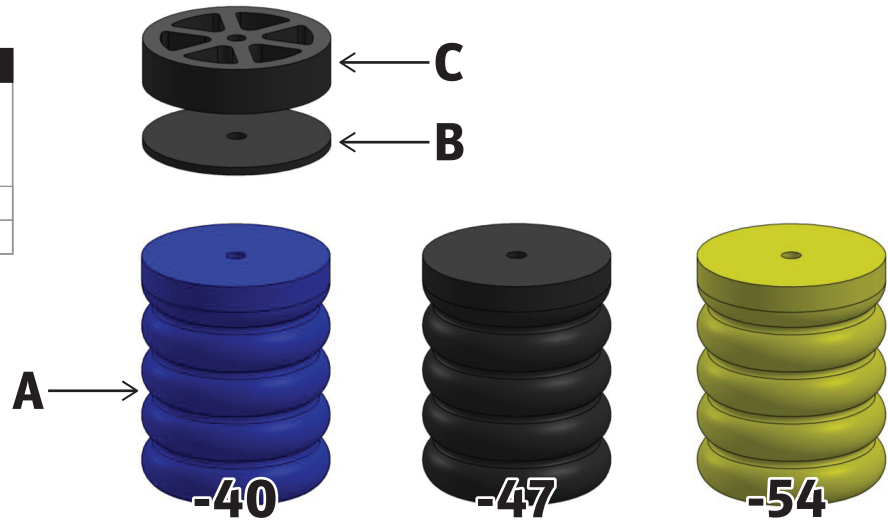

INSTALLATION

These SumoSprings Builder Kits are meant for use on custom applications and can be mounted in a variety of ways.

Customer supplies their own hardware and bracketry. We recommend using Grade 8, 3/8 hardware or similar.

Always use 4" Steel Washer [ITEM B] as a backing plate for the SumoSprings [ITEM A].

Ensure load is applied as perpendicular to the SumoSprings as possible.

Register the warranty for your SuperSprings International part. A warranty card can be found in the box your part came in.

Part Number: SFR-102-40/47/54

Product Line: SUMOSPRINGS BUILDER KIT

Page 1

Questions or Concerns?

Scan here:



or visit:
superspringsinternational.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.02 | AUG 2023