

PART NUMBER

SSF-106-40/47



SCAN HERE: To watch a video of this installation



BEFORE YOU BEGIN

PRIMARY APPLICATIONS


- > Dodge Sprinter 2500 & 3500 4 X 2 (2007 - 2009)
- > Ford E-150 4 X 2 (2002 - 2014)
- > Ford E-150 Club Wagon 4 X 2 (2003 - 2005)
- > Ford E-150 Econoline 4 X 2 (1975 - 2002) & (2007 - 2008)
- > Ford E-150 Econoline Club Wagon 4 X 2 (1975 - 2002)
- > Ford E-250 4 X 2 (2003 - 2014)
- > Ford E-250 Econoline 4 X 2 (1975 - 2002)
- > Ford E-250 Econoline Club Wagon 4 X 2 (1975 - 1991)
- > Ford E-350 Club Wagon 4 X 2 (2002 - 2005)
- > Ford E-350 Econoline 4 X 2 (1996 - 2000)
- > Ford E-350 Econoline Club Wagon 4 X 2 (1996 - 2002)
- > Ford E-350 Super Duty 4 X 2 (1999 - present)
- > Ford E-450 Econoline Super Duty 4 X 2 (1999 - 2002)
- > Ford E-450 Super Duty 4 X 2 (2003 - present)
- > Freightliner Sprinter 2500 & 3500 4 X 2 (2007 - present)
- > Mercedes-Benz Sprinter 1500 4 X 2 (2017 - present)
- > Mercedes-Benz Sprinter 2500 & 3500 4 X 2 (2010 - present)

PARTS LIST

Item	Part #	Description	QTY
A	511441	SumoSprings Blue -40	2
	511442	SumoSprings Black -47	
B	512215	M8 Washers	2
C	512219	M8 Mylock Nuts	2

TOOLS REQUIRED

- > Floor Jack
- > Jack Stands
- > Wheel Chocks
- > 10mm Socket/Wrench
- > Ratchet with extension

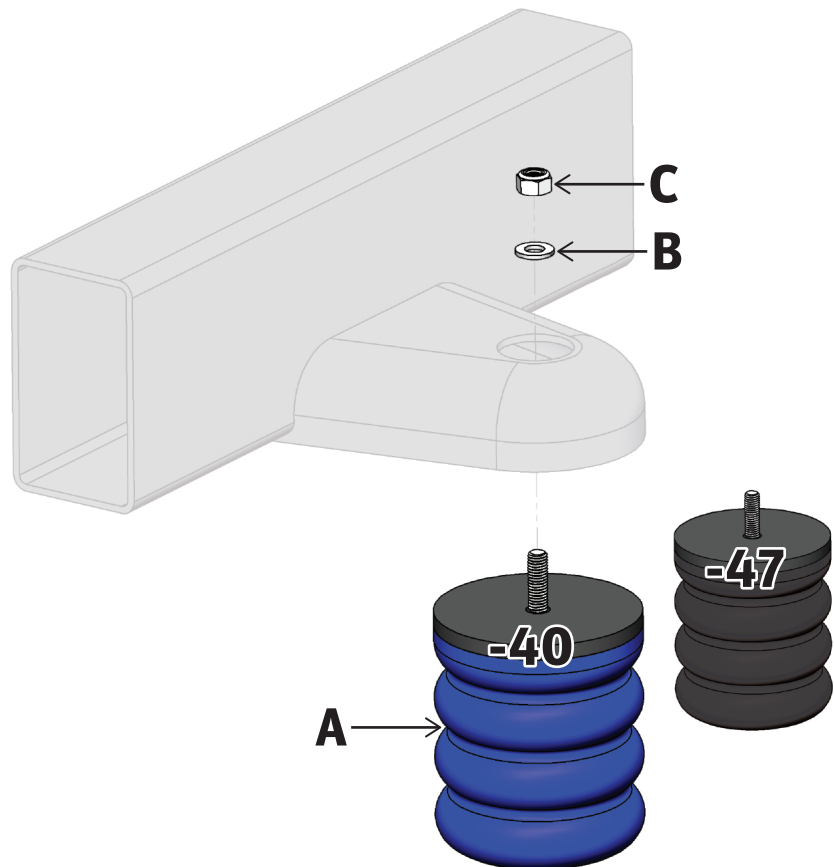

DRIVER SIDE (PASSENGER SIDE SIMILAR)

Part Number: SSF-106-40/47

Product Line: SUMOSPRINGS FRONT

Page 1

SuperSprings International, Inc.
505 Maple Avenue
Carpenteria, CA 93013

Installation Support
+1 (800) 898-0705
support@supersprings.com

superspringsint.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International, Inc. assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SuperSprings' products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a level surface, the parking brake is ON, with the ignition OFF, and place blocks in front of and behind the front tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SuperSprings. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.0 | APR 2022

PART NUMBER

SSF-106-40/47



IMPORTANT NOTICE: Your part may have been loosely preassembled to show the final product as it will be once installed on your vehicle. Please disassemble the product before proceeding to the installation.

INSTALLATION

1. Park the vehicle on a hard, level surface and engage the emergency brake. Place chocks in front and behind wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
2. Raise the front of vehicle to allow the axle to hang freely and support the frame using safety jack stands.
3. Starting on the driver side, unbolt and removing the existing bump stop from the underside of the frame.
4. Insert the stud on the end of the SumoSpring [ITEM A] into the hole where the bump stop was located.
5. Using the M8 Nylock Nuts [ITEM C] and M8 Washers [ITEM B] attach the SumoSpring [ITEM A] to the frame and tighten securely.

IMPORTANT NOTE: M8 Nylock Nuts [ITEM C] & M8 Washers [ITEM B] not used on Ford Applications.

6. Repeat steps 3 through 5 on the other side of your vehicle.
7. Raise the vehicle, remove safety jack stands, and carefully lower vehicle to the hard surface. Remove the chocks in front and back of the rear wheels.
8. Register the warranty for your SuperSprings International part. A warranty card can be found in the box your part came in.

Part Number: SSF-106-40/47	Product Line: SUMOSPRINGS FRONT	Page 2
<p>SuperSprings International, Inc. 505 Maple Avenue Carpenteria, CA 93013</p> <p>Installation Support +1 (800) 898-0705 support@supersprings.com</p> <p>superspringsint.com</p>	<p>SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.</p> <p>WARNING: These instructions are a general guide for installation. SuperSprings International, Inc. assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured. SuperSprings' products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.</p>	<p>Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.</p> <p>BEFORE INSTALLATION: Ensure the vehicle is on a level surface, the parking brake is ON, with the ignition OFF, and place blocks in front of and behind the front tires to prevent the vehicle from moving.</p> <p>DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touch-ing the SuperSprings. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.</p> <p>REV. 2.0 APR 2022</p>